
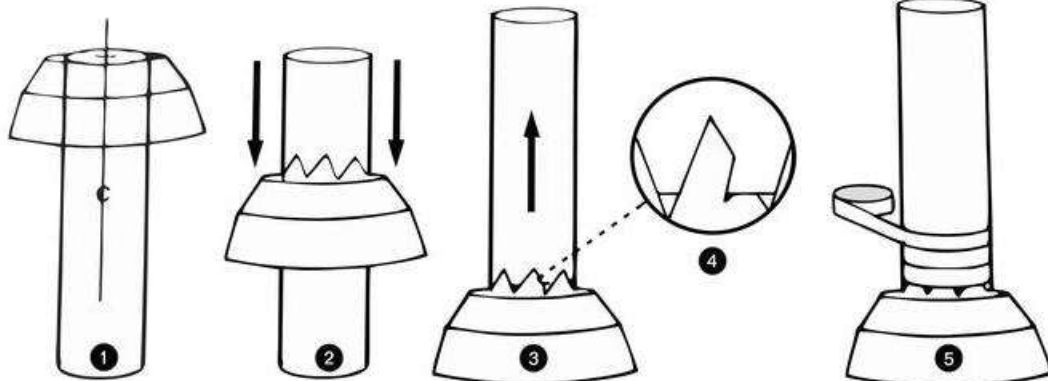


# REDIBASE

## CONSTRUCTION TUBE FOOTING FORM FOOTING SYSTEM

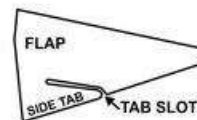


Center REDIBASE  
over tube

Push  
REDIBASE  
down over tube  
to ground.

Pull tube up through  
REDIBASE flaps  
until either  
8" or 10" small  
side tabs, slip  
under tube bottom.

Snug tube  
down into side  
tab formed slots

Apply 4 - 5 passes of  
duct tape, from app  
tube bottom  
to 1" above flap tips

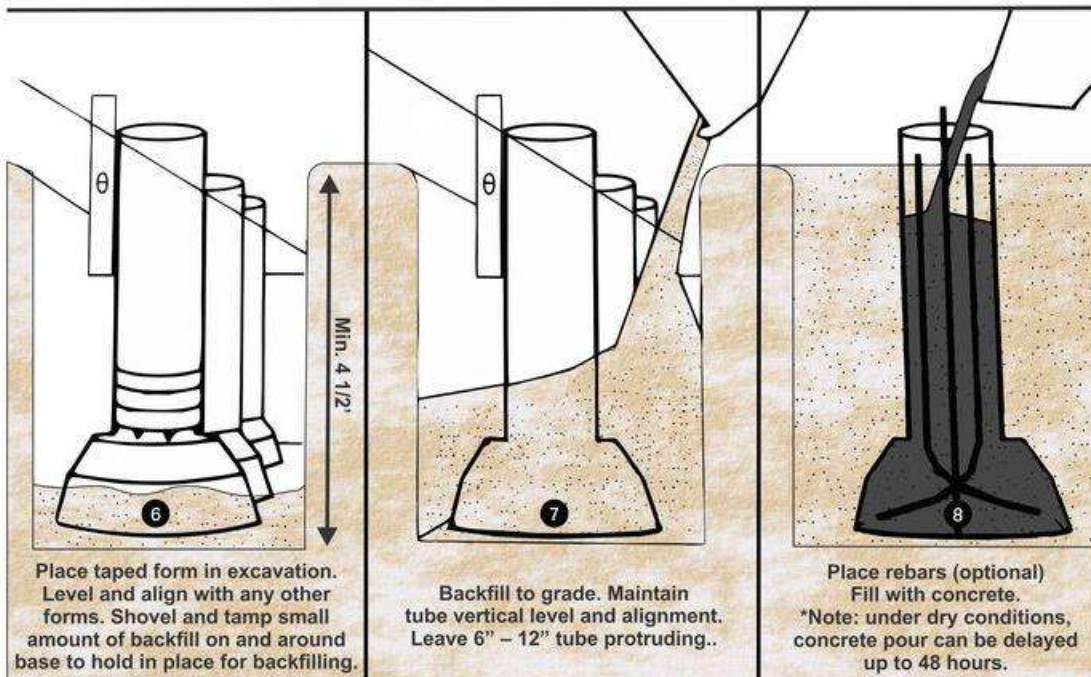

Place taped form in excavation.  
Level and align with any other  
forms. Shovel and tamp small  
amount of backfill on and around  
base to hold in place for backfilling.

Backfill to grade. Maintain  
tube vertical level and alignment.  
Leave 6" - 12" tube protruding..

Place rebar (optional)  
Fill with concrete.  
\*Note: under dry conditions,  
concrete pour can be delayed  
up to 48 hours.